

Pinouts of Laptop/Notebook Batteries:

Type	Manuf.	Notebook	Remark	Pin1	Pin2	Pin3	Pin4	Pin5	Pin6	Pin7	Pin8	Pin9	Pin10	Source	Added
40001926	?	?				V+						GND		Hannes	160708
BTP-34A1	?	?	14.8V/4Ah	GND	empty	?	?	?	?	?	V+	X	X	Hannes	170325
BTP-S31	?	?	10.8V/5.4Ah, needs bus communication for charging? stops charging >13V?	GND	?	?	?	?	V+	X	X	X	X	Hannes	171129
AS10D31	ACER	Travelmate 5740	10.8V/4.4Ah	BAT+	BAT+	EN	TEMP	SCL	SDA	GND	GND	x	x	Florian	190118
GRAPE32	ACER	?	10.8V/4.4Ah; 11.1V/4.0Ah, needs single bus comm before charging!?	GND	?	?	?	EN(GND)	?	BAT+	x	x	x	Hannes	180325
A1175	Apple	15-inch MacBook Pro		GND	?	?	?	?	BAT+	x	x	x	x	Hannes	170210
7564 ?	ASUS	EeePC 4G-BK022		GND	+V			EN				GND		nathandumont.com/..	131205
A32-K72	ASUS	?	10.8V 5.2Ah	GND	GND		EN 10k V+				V+	V+		Wolfgang	150103
3R305	DELL	D500 / D600		BAT+	BAT+	SCL	SDA	GND	?	ON/OFF	BAT-	BAT-		laptop-junction.com/..	131203
	DELL	E4300		BAT-			/Ena						BAT+	measured by Hannes	131203
	DELL	Inspiron 6400 / M70	Pin-number-direction unknown	BAT+	BAT+	SCL	SDA	BAT_PRES#	SYSPRES#	BAT_VOLT	BAT-	BAT-		Schematics	131203
EM-G320L1	Elitegroup	?	14.8V/2.2Ah	V+	empty	C	D	T	GND	GND	X	X	X	Hannes	170325
4UR18650F-2-5	Fujitsu,u.a.	?	14.8V/3.2Ah	GND	?	?	Ena	?	V+	X	X	X		Hannes	170326
4UR18650F-2-QC-EF3	Fujitsu	?	14.8V/4Ah	V+	?	?	?	GND	X	X	X	X		Hannes	170326
FPCBP59	Fujitsu	?		V+	V+	EN	Bus?	Bus?	Bus?	temp?	empty	GND		Wolfgang	150103
BTP-52EW	Fujitsu	?	14.8V 4.4Ah	V+	V+	Bus?	Bus?	temp?	GND	empty	GND			Wolfgang	160726
UN34AS1-S1	Gericom	?	11.1V/6Ah	V+	V+	C	D	T	GND	GND				Hannes	160721
NC6120, 364602-001, 365750-001, 372772-001, 398854-001, HSTNN-C12C, PB994A, HSTNN-IB05, HSTNN-LB05, PB994, HSTNN-I03C, HSTNN-I05C	HP	?	10.8V/7.8Ah	GND	GND	T	C	D	V+					Hannes	160709
HSTNN-DB30	HP	?	10.8V/43Wh	GND	?	?	E	?	V+	X	X	X	X	Hannes	170405
42T4694	IBM Lenovo	?		V+	V+	Bus?	Bus?	temp?	GND	GND				Wolfgang	150103
42T4504	IBM Lenovo	T60?		V+	V+	Bus?	Bus?	temp?	GND	GND				Wolfgang	150103
08K8039	IBM Lenovo	?		GND	temp?	Bus?	Bus?	V+						Wolfgang	150103
02K6817	IBM Lenovo	?		GND	temp?	Bus?	Bus?	V+						Wolfgang	150103
45N1001 70+	Lenovo	T430/530	10.8V/5,2Ah	V+	V+	SCL	SDA	Temp (10k)	GND	GND				Florian	181211
45N1011 70++	Lenovo	T430/530/ W530	11.1V/8.4Ah	V+	V+	SCL	SDA	Temp (10k)	GND	GND				Florian	181211
BTP-C2BM	MEDION	MD96850 MD96640	11.1V/7.8Ah	GND					V+					Wolfgang	160726
PCGA-BP2NX	SONY	?	14.8V/4Ah	V+	empty	?	?	?	?	/Ena(1k zu GND)	GND	GND	X	Hannes	170325
	Toshiba	Satellite C675D		GND	GND	SCL	SDA	Temp?	SysPresent	?	BAT+	BAT+		kuzyatech.com/..	131205
PA2510U	Toshiba	?		GND						temp?			V+	Wolfgang	150103
PA3107U	Toshiba	Satellite Pro 4600	ON: beide Zusatzpins verbinden	GND						temp?		V+		Wolfgang	150103

Pinzuordnung: so wie der Akku in Laptop kommt und der Laptop dann aufm Tisch stehen würde, ist oben. Dann werden die Kontakte von links aufsteigend nummeriert.



DELL-battery charge-enable:

DELL-Akkus müssen zur Aktivierung der Ladung mittels SMBUS-Kommunikation dazu motiviert werden.

- I2C-Adresse: 0x0B
- Daten: 0x00 0x0A 0x00

getestet mit:

- Type 4R084 (Aktivierungssequenz reicht einmal)
- Type 75UYF (Latitude C510/C610/C840 Akku) (Aktivierungssequenz reicht einmal)
- Type NT349 (Sequenz muss mindestens alle 30s wiederholt werden)
- Type U4873 (Precision M90)(Aktivierungssequenz reicht einmal)

From:
<https://loetlabor-jena.de/> - **Lötlabor Jena**

Permanent link:
<https://loetlabor-jena.de/doku.php?id=projekte:pinout:laptopbatteries:start&rev=1547823173>

Last update: **2019/01/18 14:52**

